


Fittings & Flow Diagram

Countertop Reverse Osmosis

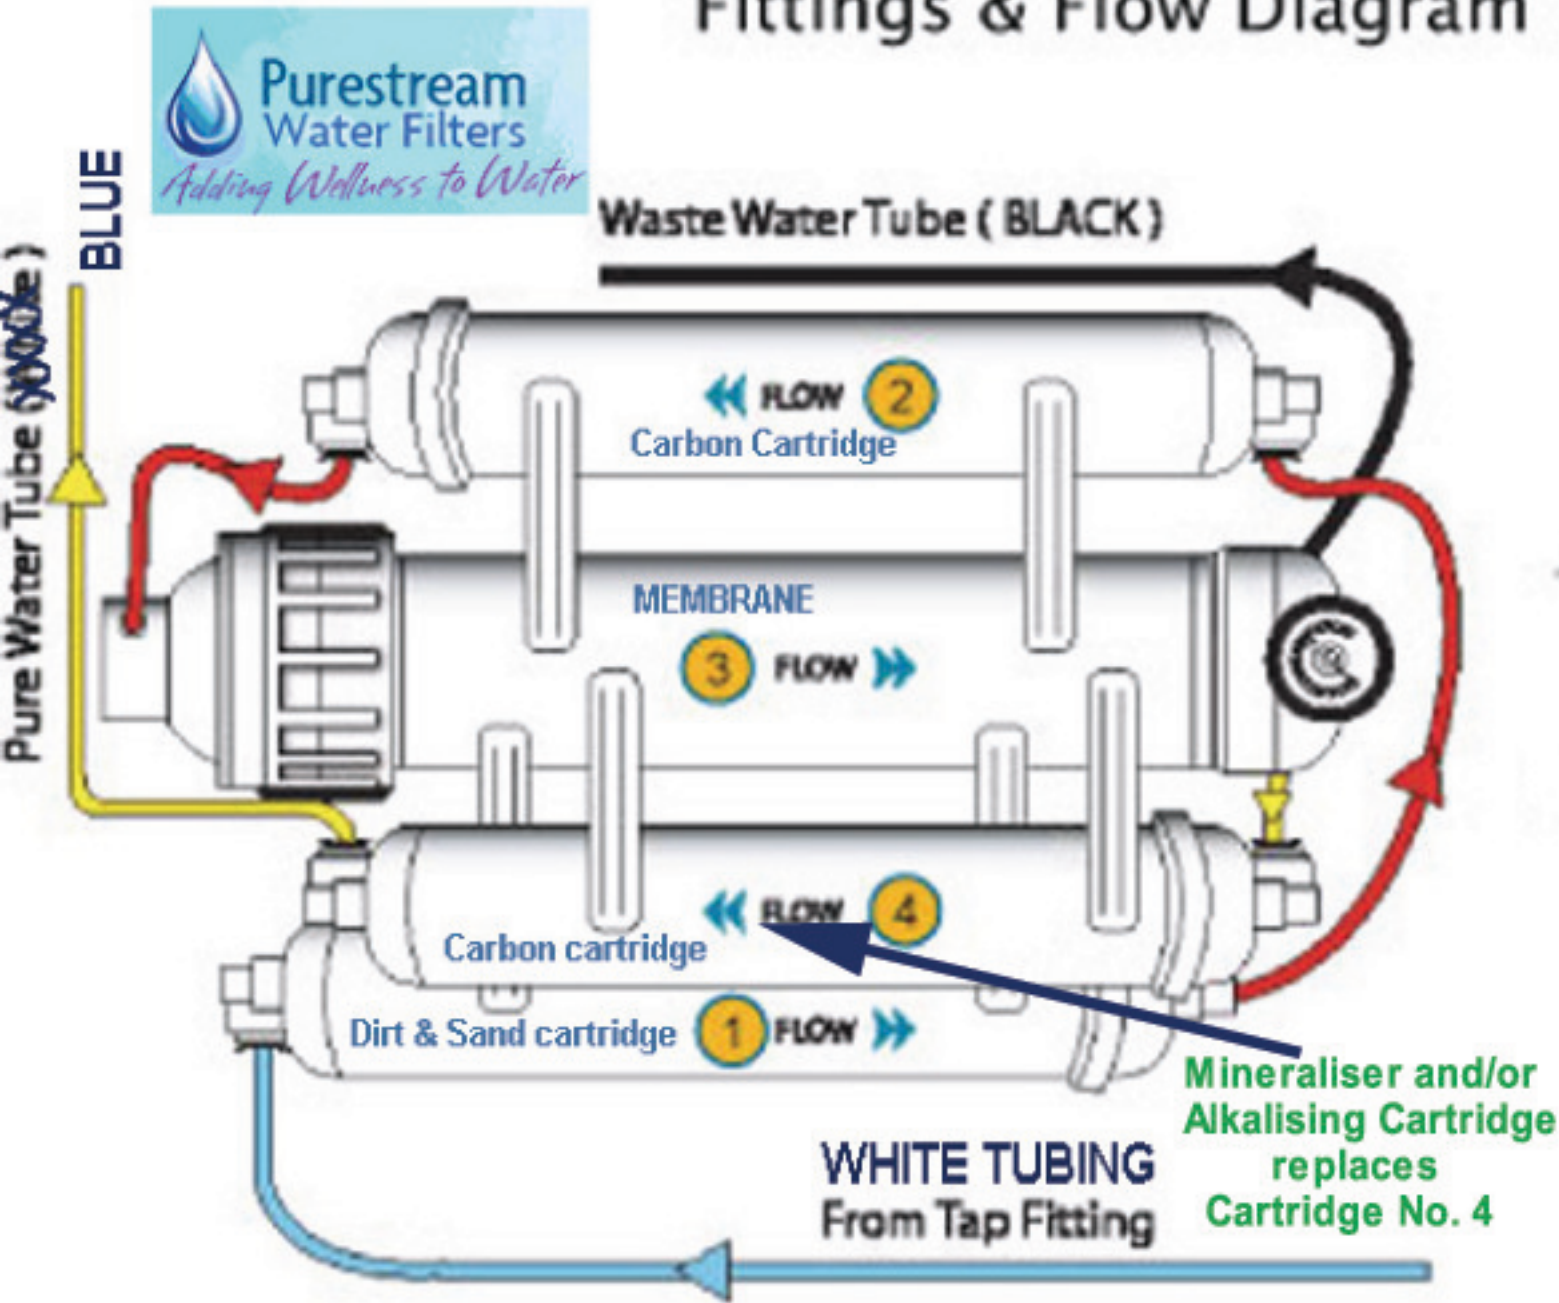

1. Remove red locking clip. To disconnect push collet in push fitting at end of each cartridge back on itself and pull tubing out. You may need to put fingers on each side of the tubing to release. Throw old cartridges away.

2. Install new inline cartridges as per diagram noting flow of water identified by arrow on cartridge.

3. Now is the time to flush membrane using the flushing service mode. Turn the blue / black handle of the stop valve located in the black waste line for approx. 1 – 2 minutes. Water should only come out of the black tubing. We also recommend you hold on to the black tubing as water will come out with force.

