


PURESTREAM 4 STAGE COMPACT REVERSE OSMOSIS INSTALLATION DIAGRAM

DRAIN CLAMP

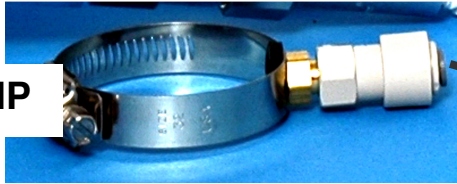

Your waste water is eliminated through the black tubing. The black tubing is connected to the Drain Clamp by means of the John Guest fitting. The Drain Clamp is installed just above the S bend on your kitchen drainpipe.



White tubing connects to tank from TEE PIECE. One line brings water to and from tank.



Blue tubing from the exit of the polishing filter is connection to the faucet



INSTALLATION OF PI-ALKALINE FILTER/ OR MINERALISER.

This is installed in the line going to the tank with the flow arrow away from the tank. 2 brackets are included to attach to wall if necessary

Red inlet tubing connects Pressure Limiting Valve to inlet of



Purestream 4 Stage Reverse Osmosis Installation Diagram.

www.aeoncp.com.au

1300 888 429