


# PURESTREAM 4 STAGE PREMIUM UNDERSINK REVERSE OSMOSIS INSTALLATION DIAGRAM

## DRAIN CLAMP

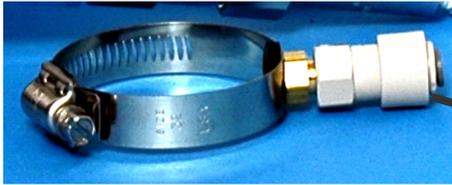

Your waste water is eliminated through the black tubing. The black tubing is connected to the Drain Clamp by means of the John Guest fitting. The Drain Clamp is installed just above the S bend on your kitchen drainpipe.



White tubing connects to tank from TEE PIECE. One line brings water to and from tank.

## Membrane Flushing Mode



Blue tubing from the exit of the polishing filter is connection to the faucet



Red inlet tubing connects Pressure Limiting Valve to inlet of unit. If a dishwasher or flexible hose is available. Adaptors are available to eliminate the need to cut into the copper pipe. See Installation Options



On installation should flow be restricted from faucet, it may have some fine sediment from the Alkaline on inlet of post filter. Disconnect K2540 (post filter) and reverse flow.



## INSTALLATION OF PI-ALKALINE FILTER.

This is installed in the line going to the tank with the flow arrow away from the tank. 2 brackets are included to attach to wall if necessary