Fittings & Flow Diagram

Disregard tubing colours

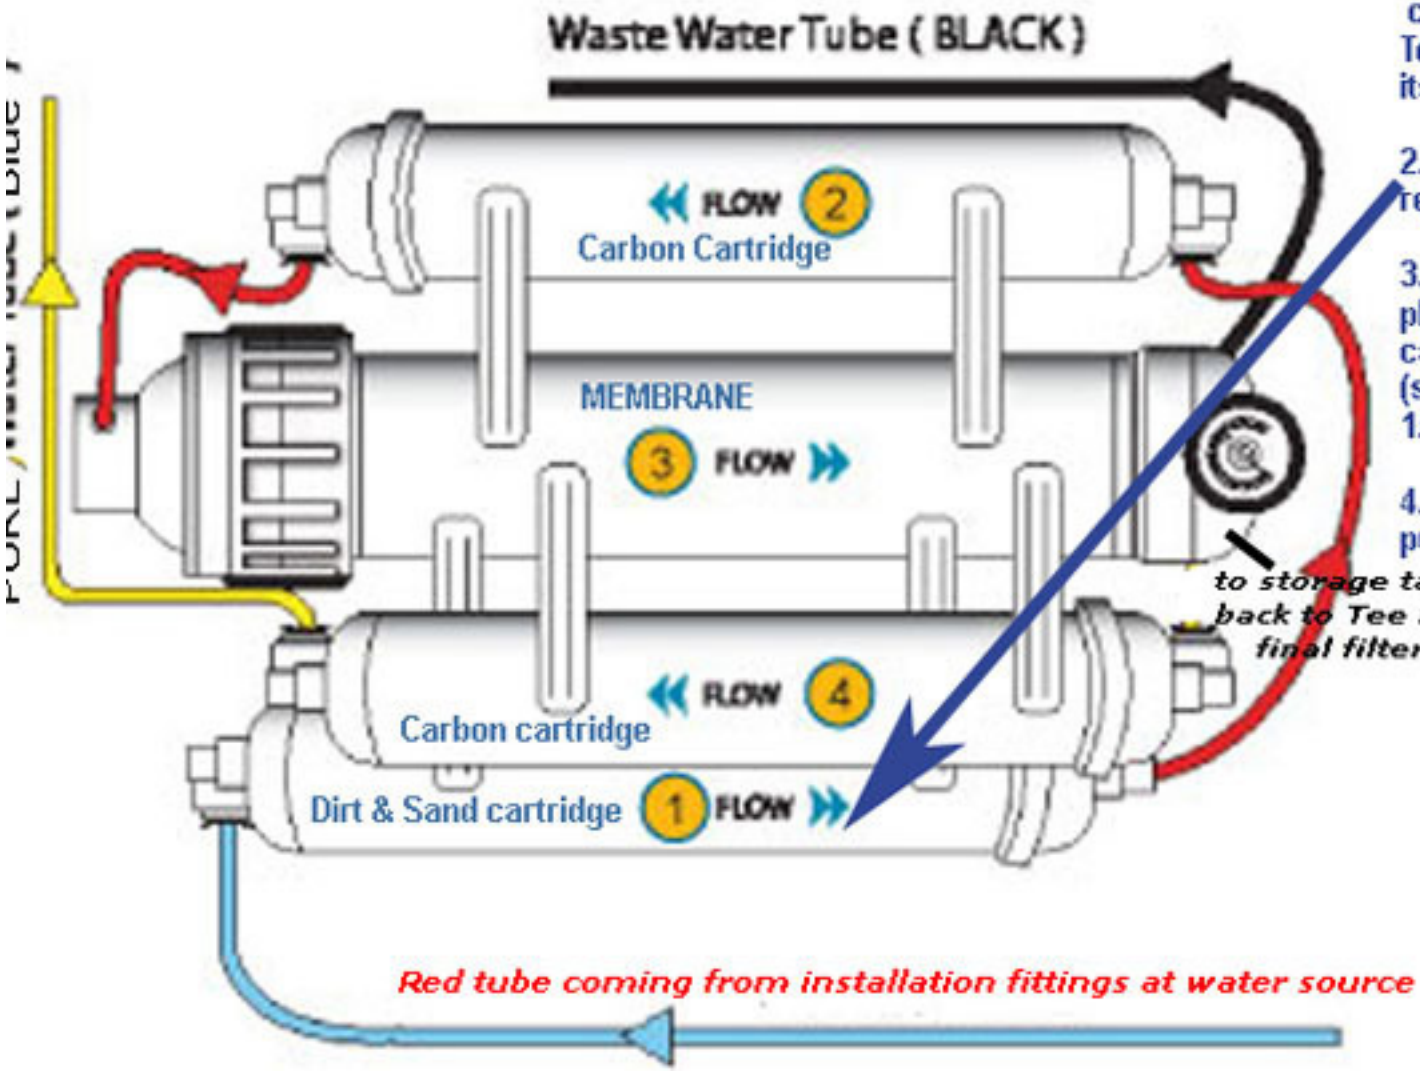

1. Remove red locking clips at end of eac cartridge.
To release tubing, push collar back on itself and pull out tubing.

2. Note flow on new cartridge and replace starting with sediment

3. New cartridges may have small white plastic tubing in end. these are to keep cartridges sterile, again push collar (sleeve) back on fitting and pull white 1/2" tube out.

4. Reinserting tubing, note 2 part action, push in, then push in again to prevent leaking.